



Distizym® BA-N

Bacterial α -amylase
for starch liquefaction

Product Description

Distizym® BA-N is a special enzyme applied in alcohol production for the liquefaction of starch-containing mash. The enzyme is produced from a specially selected strain of *Bacillus subtilis*. The main activity of the enzyme is based on an α -amylase (1,4- α -D-glucan-glucanohydrolase: EC.3.2.1.1).

Distizym® BA-N is tested by specialized laboratories for purity and quality.

Aim of Treatment

Liquefaction and dextrinisation of the gelatinised, digested starch in distilling mash in a temperature range of 30-90 °C.

Product and Effect

As an endo enzyme Distizym® BA-N hydrolyses 1,4- α -D-glycosidic bonds within the starch molecule. Products formed hereby are α -limit dextrins and oligosaccharides.

Dosage

The following standard dosages are recommended:

120 mL Distizym® BA-N/ tonne grain starch,
250 mL Distizym® BA-N/ tonne potato starch or starch from other farinaceous raw materials.

In case of a deviation from standard conditions a higher or lower dosage might be required.

Application

Traditional digestion of starch without pressure

Distizym® BA-N is dosed into the mash tank before doughing or milling in the raw material or it is added during or after this process – in the latter case before or at the start of the heating phase. Before addition the enzyme is diluted with cold water in the ratio of 1:1. Dependent on the raw material Distizym® BA-N shows a good liquefaction effect already at temperatures as of 30 °C and a strong liquefaction effect as of 50 °C. Dependent on the heating rate, a more or less long liquefaction rest is kept at a mash temperature of 70-80 °C before reaching the final temperature. It is recommended to add calcium (in form of $\text{Ca}(\text{OH})_2$, CaCl_2 , etc.) in amounts of 75-150 ppm related to pure calcium. This, at first, activates the enzyme and, at temperatures above 60 °C, has an additionally stabilizing effect. In case of mash with a pH-value below 5.0 an adjustment to pH 6.0 is recommended. When calcium hydroxide is applied to raise the pH-value, then, at the same time, higher calcium concentrations result.

Special pressure/thermo processes (High-Pressure Cooking Process according to Michurin etc.)

Distizym® BA-N can be applied in High Pressure Cooking Methods when there is no necessity or possibility to keep a liquefaction rest at high temperatures (90-95 °C). This is for instance the case in High Pressure Cooking Processes (at 5-6 bar, respectively 150-160 °C), when, after pressure release in the steam separator, the mash is continuously cooled down to temperatures below 70 °C and is transferred into the saccharification vat. In case of other High Pressure Cooking Processes with continuous cooling of the mash, e.g. the Jet-Cooker method, Distizym® BA-N reduces the amount of thermostable amylase (Distizym® BA-TS), always necessary at the start, by an addition as of 80 °C for further liquefaction. In both cases it is recommended to add calcium (in form of $\text{Ca}(\text{OH})_2$, CaCl_2 , etc.) in amounts of 75-150 ppm related to pure calcium to stabilize and protect the enzyme from inactivation through the, at the start, still high temperatures.

Storage

Optimum storage conditions at 0-10 °C. Higher storage temperatures result in a shorter shelf life. Temperatures above 25 °C must be avoided. Reseal opened packagings tightly and use up as soon as possible.

ERBSLÖH Geisenheim AG

Erbslöhstraße 1, 65366 Geisenheim, Germany

Tel: +49 6722 708-0, Fax: +49 6722 6098, info@erbsloeh.com, www.erbsloeh.com

Our technical product leaflets and the treatment recommendations they contain, are based on our current knowledge and experience and we make all reasonable efforts to ensure the accuracy of the information it provides. But since pre-treatment is mostly unknown to us and moreover imponderabilities with regard to the natural products to treat have to be taken into consideration, the advice given provides general information and serves for your consultation. Without a separate, written statement from our side on a defined matter or problem, the information provided should not be relied upon as legal advice or regarded as a substitute for legal advice and is without liability. The information provided is in accordance with the law in force of the Federal Republic of Germany and the EU. In addition, our general terms of business apply.

version 002 – 07/2011 TH – printed 01.07.2011

General Characteristics

Enzyme characteristics: the activity range of the enzyme is between pH 4.0 and 8.0, the optimum is at pH 5.8-6.0 in the presence of substrate and calcium. The temperature range is between 30 °C and 90 °C, the temperature optimum is at 70-80 °C in the presence of substrate, calcium and at an optimal pH-value.

The diagrammes 1 and 2 show the influence of temperature and pH-value on the enzyme activity of Distizym® BA-N.

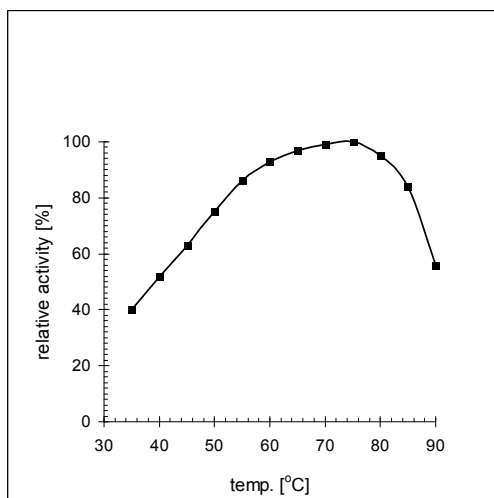


Fig 1: Influence of temperature on activity
(16 % starch; pH 6.0).

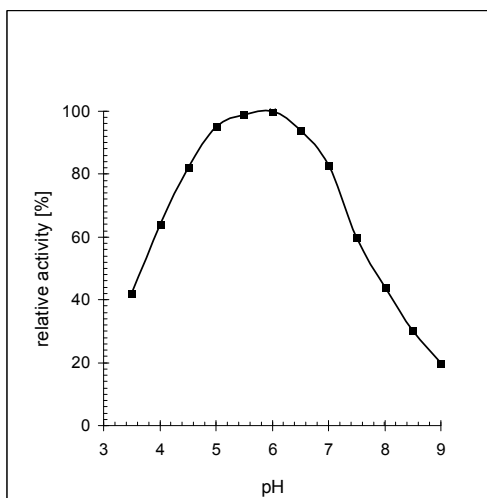


Fig 2: Influence of pH-value on activity
(16 % starch; 70 °C).